



# CleverMic SP15

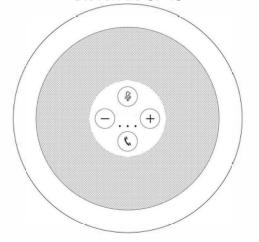

User Manual

#### Product Functions

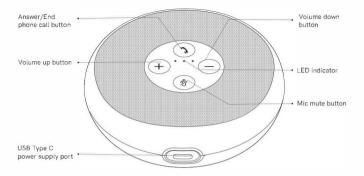

#### Instructions for Use

Connecting the product to a computer using a USB cable

- CleverMic SP15 automatically starts up when it is connected to a computer using a USB cable.
- CleverMic SP15 automatically turns off when the USB cable is disconnected from the computer.



CleverMic SP15 automatically enables the intelligent noise cancellation function when it starts up.

## LED Definition

Status	Indication	LED
Power on	Three indicators light up on successively.	Blue
Working	Three indicators keep on.	Blue
Microphone mute	Three indicators keep on.	Red

## Volume LED Indications

0	0	0	0%	0	0	0	10%
•	0	0	20%~30%	•	•	0	40%~50%
•	•	0	60%~70%	•	•	0	80%~90%
•	•	•	100%				

## **Product Parameters**

Output rating of the speaker	3W	Signal-to-noise ratio	75dB
Number of microphones	2	Microphone directivity	360°
Product dimensions	112*35.8mm	'	

# Simple Fault Statement

Problem or symptom	Possible causes	Troubleshooting
The product does not work after it is connected to a computer using a USB cable.	The USB cable is not inserted property. The USB cable is damaged.	Reinsert the USB cable.  Replace the USB cable.
The speaker does not work after it is connected.	The speaker is not used correctly. The SP15 speaker has been muted.	① Set this device as the default speaker. ② Use the "volume up" button to increase the volume of the device.
The speaker does not work after it is connected.	The microphone is not used correctly. The SP15 microphone has been muted.	Set this device as the default microphone.     Disable the microphone mute function.
If the issues above still persist after troubleshooting.	Device driver identification fails.	Navigate to Device Manager - Sound, video and game controller to uninstall the current SP15 device driver. Then, reconnect the device to the computer.